

User manual
technical specification

Air humidity transmitter series

LF-TD 60 and LF-TD 90



version 1.1
© Schaller GmbH
2013



Max-Schaller-Straße 99
A – 8181 St. Ruprecht an der Raab
Tel +43 (0)3178 28899
Fax +43 (0)3178 28899 - 901
support@schaller-gmbh.at
<http://www.humimeter.com/>


Air humidity and temperature transmitter

Measuring transducer for recording and transferring relative humidity and temperature in fixed installations.

Input voltage 12VDC to 29VDC (due to existing power supply)

The used sensor technology enables to quickly and reliably realise even little moisture fluctuations and their tendencies, so that preventive actions can be effected in time. Some applications (e.g. installation in a sewage duct) make it necessary to separate the measuring probe from the housing because of the temperature conditioning.

The intervals for checking the instrument depend on your operational demands and the required level of accuracy.

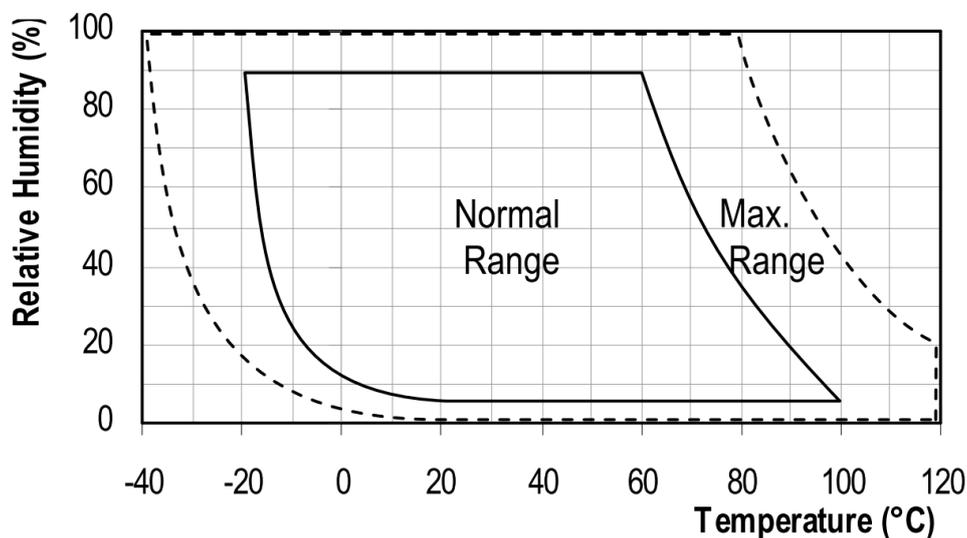

Relative air humidity:

indicates the relation between the current water vapour pressure and the maximal possible water vapour pressure (called saturation vapour pressure).

The relative humidity shows the degree the air is saturated with water vapour. For example:

50% relative humidity indicates that at the current temperature and the current pressure the air is saturated with water vapour for half of its value, 100% relative humidity means that the air is totally saturated. When the relative humidity is more than 100%, the excessive moisture would condense or form fog.

Common sources of error:

Accurate moisture measurements depend on several different factors. Here is a list of common reasons for incorrect readings:

- Danger of condensation because of changing temperature (changing from cold to warm)
- Sunlight or other sources of heat or cold that do not correspond to the surrounding temperature
- Irreversible damage of the sensor due to aggressive gases
- Dripping or sprayed water
- Pollution of the sensor with dust or salts
- No check of calibration during operation!
- Measuring errors due to too short conditioning time

The following chart displays the effects of a temperature difference of 1°C:

r.h.	10°C	20°C	30°C
10%	±0.7%	±0.6%	±0.6%
50%	±3.5%	±3.2%	±3.0%
90%	±6.3%	±5.7%	±5.4%

Illustration: Assuming a relative humidity of 50%, at room temperature a temperature difference between the measuring sensor and the ambient air of 1°C causes a measuring error of 3.2% r.h.; with a temperature difference of 3°C the measuring error is more than 10% r.h.

Installation of the transmitter

- Make sure that the cable for power supply resp. data transfer is not installed in the area of interference fields!
- Observe the permitted cross sections for the installation!
- In general it is necessary to keep the cable length as short as possible.
- If an extension of the feed cable is required, the cross section of the extension must not be lower than 0.25mm².
- Also the transmitter must not be operated in the area of electromagnetic interference fields.
- If the electronics housing and the electronic display unit are earthed, make sure that also a voltage equalising cable is installed.

Mounting:

The delivered ferrite has to be mounted on the feed cable near the cable connection and has to be fixed using cable straps or something similar to prevent from shifting. The shield has to be earthed at the housing of the plug.

Fitting of the sensor head:

The measuring sensor has to be positioned at a representative place for collecting measuring values.


Don't twist off the sensor caps. Shifting the sensor head may endanger the leak tightness.

In case of possibly emerging condensation water the sensor head has to be installed slightly upturned. This ensures that condensation water can drain off from the sensor head (sensor cap) down to the housing resp. cable and can drip off there.

Installation of the plug:

colour of cable	Pin no.	function
white	1	ground
brown	2	12-29VDC power supply
green	3	rel. humidity I _{out} 4-20mA
yellow	4	n.c.
grey	5	temperature I _{out} 4-20mA
yellow-green	housing	shielding

View from the outside of the plug:

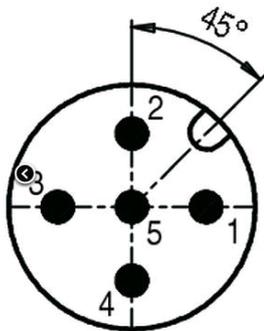

Exemption from liability


For miss-readings and wrong measurements and of this resulting damage we refuse any liability. This is a device for quick determination of moisture. The moisture depends on multiple conditions and multiple materials. Therefore we recommend a plausibility check of the measuring results. Each device includes a serial number and the guarantee stamp. If those are broken, no claims for guarantee can be made. In case of a faulty device, please contact Schaller GmbH (www.humimeter.com) or your dealer.

Technical data and available accessories

type	LF-TD 60	LF-TD 90
article no.	12609	12665
measuring range		
relative air humidity	0 to 100 %	0 to 100 %
temperature	-20°C to +60°C	-20°C to +90°C
output		
relative air humidity	4 - 20mA	4 - 20mA
scaling air humidity	0 to 100 %	0 to 100 %
temperature	4 - 20mA	4 - 20mA
scaling temperature	-20°C to +60°C	-20°C to +90°C
working resistance	< 500 Ohm (UB 24V)	< 500 Ohm (UB 24V)
accuracy		
factory calibration		
relative air humidity	10 to 90%: ± 2.0 %	10 to 90%: ± 2.0 %
temperature	+10 to +60°C: ± 0.3 °C	+10 to +60°C: ± 0.3 °C
operating temperature		
sensor head	-20°C to +60°C	-20°C to +90°C
electronics	-20°C to +85°C	-20°C to +85°C
power supply		
voltage	24 VDC (12 to 29VDC)	24 VDC (12 to 29VDC)
current consumption	approx. 18 mA ¹⁾	approx. 18 mA ¹⁾
dimensions & others		
dimensions sensor head	Ø 12 x 100 mm	Ø 12 x 125 mm
material of sensor head	plastic	stainless steel
sensor cap	plastic with filter paper	plastic with filter paper
dimensions electronics housing	70 x 32 x 120 mm	70 x 32 x 120 mm
material electronics housing	anodised aluminium	anodised aluminium
protection class electronics housing	IP 65	IP 65
electrical connection	5 m connecting cable	sensor plug
options/accessories		
display	article no. 12662	article no. 12662
relay output for moisture	article no. 12806	article no. 12806
RS232 interface	article no. 12807	article no. 12807
USB interface	article no. 12808	article no. 12808
Bluetooth (only with USB interface article no. 12808)	article no. 12627	article no. 12627
Profinet interface	article no. 12809	article no. 12809
Ethernet interface	article no. 12810	article no. 12810
Modbus interface	article no. 12811	article no. 12811


¹⁾ without interface, display and bus systems

Technical drawing LF-TD 60

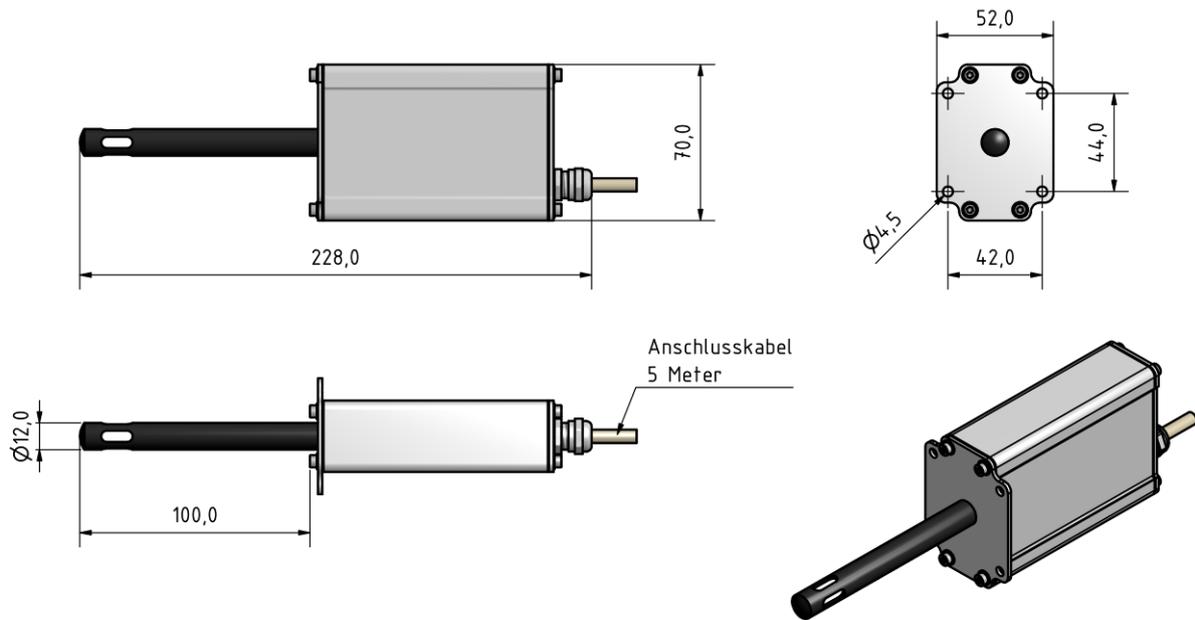

(no original illustration, differences because of the type and version possible)

Technical drawing LF-TD 90

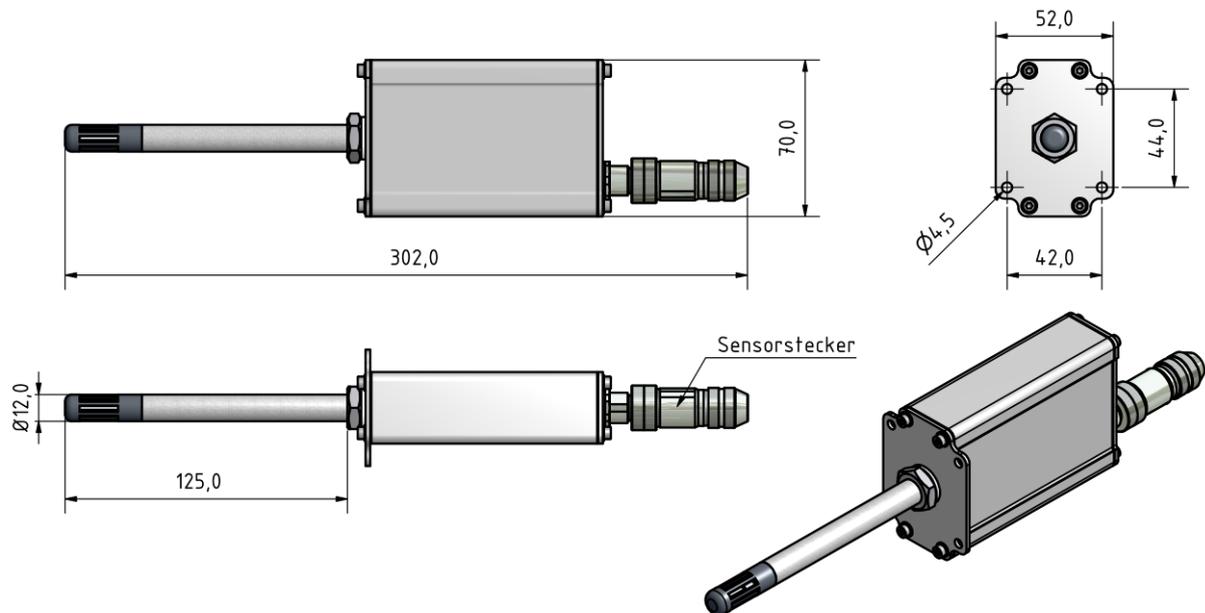

(no original illustration, differences because of the type and version possible)

Calibration accessories:

Calibration certificate, calibration equipment, certified calibration ampoules with 35%/50%/80% r.h., reference devices for continuous monitoring on request

IMPORTANT!

Common reasons for incorrect measurements

- Danger of condensation because of changing temperature (changing from cold to warm)
- Sunlight or other sources of heat or cold that do not correspond to the surrounding temperature
- Irreversible damage of the sensor due to aggressive gases
- Dripping or sprayed water
- Pollution of the sensor with dust or salts
- Foreign particles on the sensor
- Measuring errors due to too short conditioning time

Max-Schaller-Straße 99
A – 8181 St. Ruprecht an der Raab
Tel +43 (0)3178 28899
Fax +43 (0)3178 28899 - 901
support@schaller-gmbh.at
<http://www.humimeter.com/>